

7-Port Fiber Ring Network Switch

User's Manual

V1.0.0

Important Safeguards and Warnings

Please read the following safeguards and warnings carefully before using the product in order to avoid damages and losses.

Note:

Do not expose the device to lampblack, steam or dust. Otherwise it may cause fire or electric shock.

Do not install the device at position exposed to sunlight or in high temperature. Temperature rise in device may cause fire.

Do not expose the device to humid environment. Otherwise it may cause fire.

The device must be installed on solid and flat surface in order to guarantee safety under load and earthquake. Otherwise, it may cause device to fall off or turnover.

Do not place the device on carpet or quilt.

Do not block air vent of the device or ventilation around the device. Otherwise, temperature in device will rise and may cause fire.

Do not place any object on the device.

Do not disassemble the device without professional instruction.

Warning:

Please use battery properly to avoid fire, explosion and other dangers.

Please replace used battery with battery of the same type.

Do not use power line other than the one specified. Please use it properly. Otherwise, it may cause fire or electric shock.

Special Announcement:

This manual is for reference only.

All the designs and software here are subject to change without prior written notice.

All trademarks and registered trademarks are the properties of their respective owners.

If there is any uncertainty or controversy, please refer to the final explanation of us.

Please visit our website for more information.

Table of Contents

1	Product Overview	- 1 -
1.1	Features	- 1 -
1.2	Typical Application	- 2 -
1.2.1	General Mode	- 2 -
1.2.2	Ring Network Mode	- 2 -
2	Device Structure	- 3 -
2.1	Front Panel	- 3 -
2.2	Rear panel	- 3 -
3	WEB Client Operation	- 5 -
3.1	Log in	- 5 -
3.2	Device Info	- 6 -
3.3	System Settings	- 6 -
3.3.1	System Info	- 6 -
3.3.2	Network Config	- 7 -
3.3.3	Software Upgrade	- 7 -
3.3.4	Change Password	- 7 -
3.3.5	Restore Default	- 8 -
3.3.6	System Reboot	- 8 -
3.4	Device Management	- 9 -
3.4.1	Ring Config	- 9 -
3.4.2	Serial Config	- 9 -
3.4.3	802.1Q VLAN Config	- 10 -
3.4.4	MAC Security	- 11 -
3.5	Port management	- 11 -
3.5.1	Port Config	- 11 -
3.5.2	Port Mirroring Config	- 12 -
3.5.3	Port Speed Limit	- 12 -
4	FAQ	- 13 -
	Appendix 1 Toxic or Hazardous Materials or Elements	- 14 -

1 Product Overview

7-port fiber ring network switch is a 2-layer switch which supports network management and ring network redundancy function, providing 4 10M/100M self-adaptive Ethernet ports, 1 10M/100M/1000M self-adaptive Ethernet port and 2 Gbps fiber ports, and conducting long-distance transmission by single module dual fiber, which can be widely applied in safe city, highway and other places.

1.1 Features

- The product is a 2-layer switch.
- Support 2 Gbps SFP (Small Form-factor Pluggables) fiber ports, two fiber ports can be made up as a fiber ring network.
- Support 4 10M/100M self-adaptive RJ45 ports.
- Support 1 10M/100M/1000M self-adaptive RJ45 port.
- Support 4 RS485 ports and 1 RS232 port.
- Support 4 on-off inputs and 2 on-off outputs.
- Support 1 CONSOLE port.
- Conform IEEE802.3, IEEE802.3u, IEEE802.3ab/z and IEEE802.3X standards
- All ports automatic adapt MDI/MDIX mode.
- MAC automatic learning and aging, MAC address list capacity is up to 8K.
- IEEE802.3X full dual flow control and Backpressure half dual flow control.
- Support DC12V, DC24V, and AC24V power supply.
- Support SNMP (Simple Network Management Protocol) protocol.
- Support STP (Spanning Tree Protocol) protocol.
- Working temperature: - 40°C ~ + 75°C.
- Indicator displays data transmission status and power status

1.2 Typical Application

1.2.1 General Mode

See Figure 1-1 for the general mode.

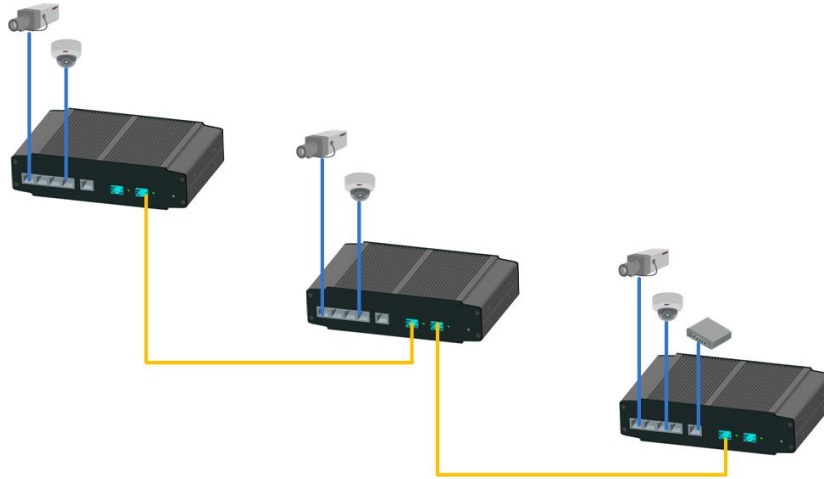


Figure 1-1

1.2.2 Ring Network Mode

After the ring network mode is enabled, it can be used to stop generating broadcast storm on the loop, and it can rapidly switch data transmission link during link failure, which can improve reliability and ensure the normal transmission of business data. See Figure 1-2 for more details.

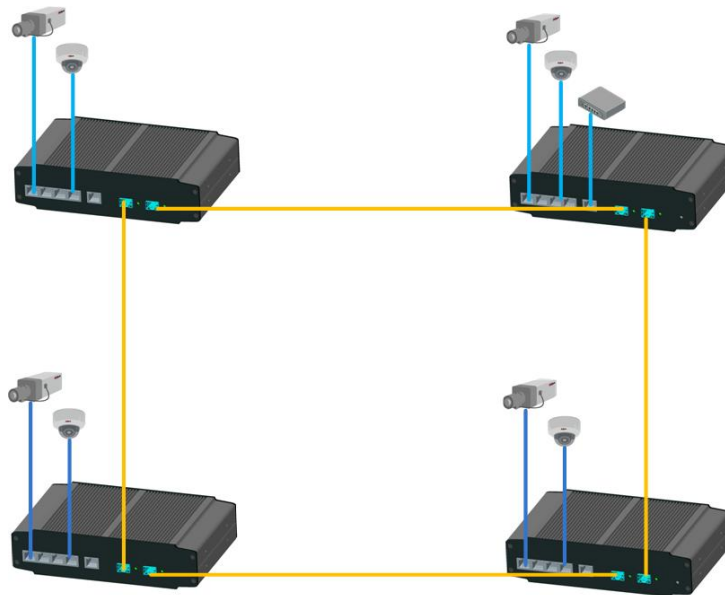


Figure 1-2

2 Device Structure

2.1 Front Panel

The front panel is shown in Figure 2- 1.

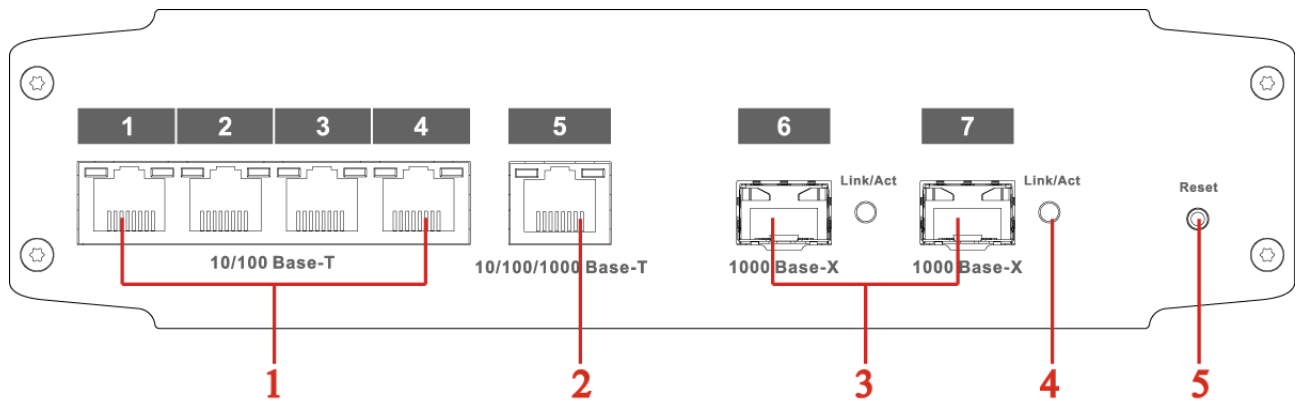


Figure 2- 1

Refer to Sheet 2-1 for more details.

SN	Name	Function
1	RJ45 Port	Ethernet port, support 10/100M self-adaptive
2	RJ45 Port	Ethernet port, support 10/100/1000M self-adaptive
3	Fiber Port	Gbps SFP fiber port, two fiber ports can be made up as a fiber ring network.
4	Fiber Port Indicator	Fiber port status indicator
5	Reset Button	Long press the button for reset operation, and recover default configuration.

2.2 Rear panel

The rear panel is shown in Figure 2- 2.

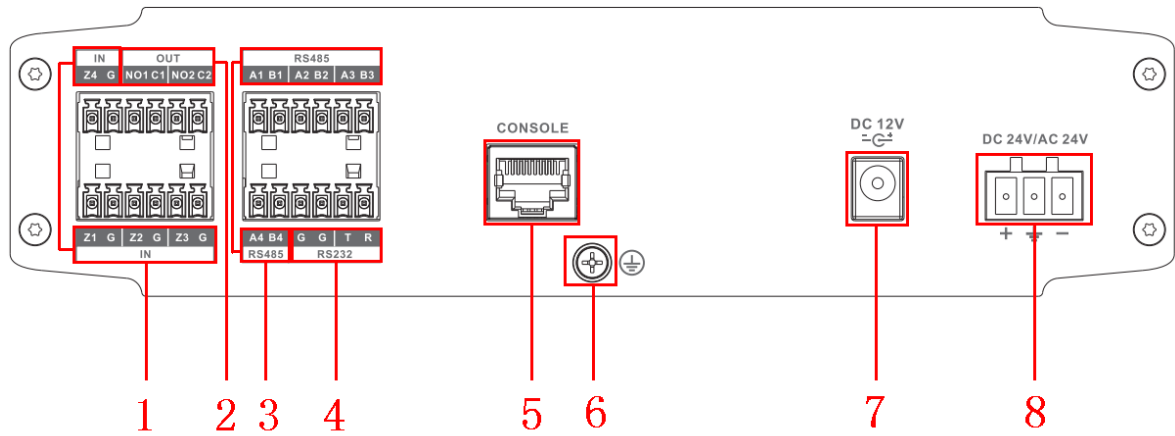


Figure 2- 2

Refer to Sheet 2-2 for more details.

SN	Name	Function
1	Alarm Input Port	Connect alarm input device, support 4 channel alarm input.
2	Alarm Output Port	Connect alarm output device, support 2 channel alarm output.
3	RS485 Port	Connect external device of RS485 port.
4	RS232 Port	Connect external device of RS232 port.
5	CONSOLE Serial Port	Device debugging port.
6	GND Screw	GND
7	Power Port	Support DC 12V power supply
8	Power Port	Support DC 24V or AC 24V power supply.

Sheet 2-2

3 WEB Client Operation

Users can conduct system setting, device management and port management by connecting the device to PC.

3.1 Log in

Make sure the device is connected to PC before logging in Web, and make the PC and device in the same network segment. The steps of logging in WEB client are as follows:

Step 1

Enter device IP address in the IE address bar (default IP address is: 192.168.1.110), press Enter, and the system displays the interface as shown in Figure 3-1.

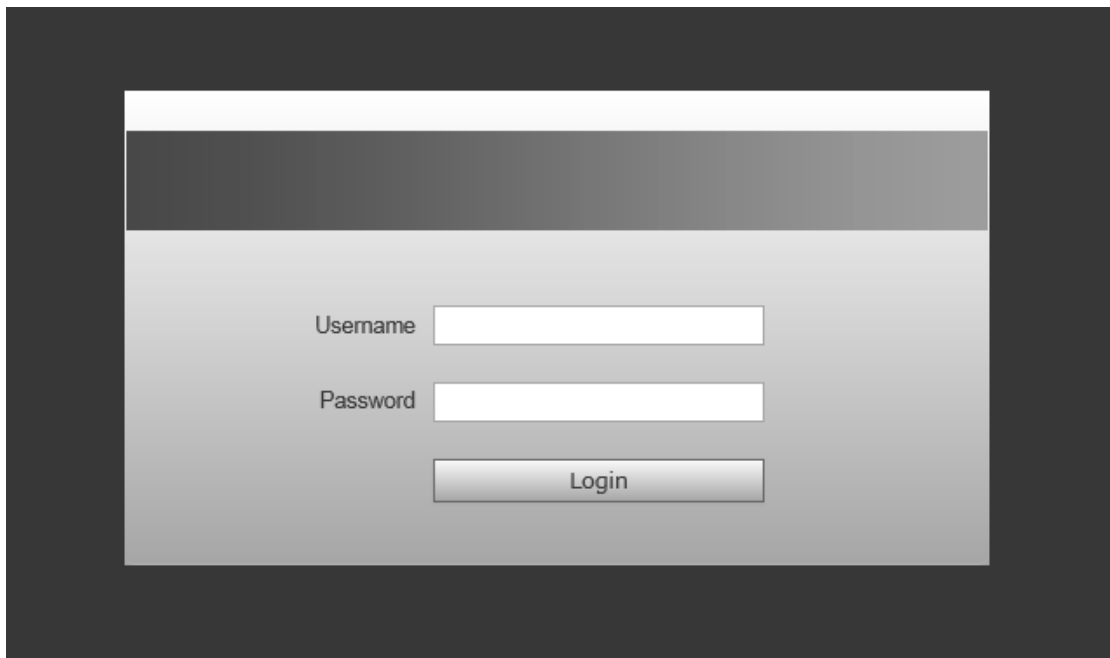


Figure 3-1

Step 2

Enter "User name" and "password", single click "Login", the system will enter the main interface of Web client.


Note:

Device factory default password is empty; users only need to enter username "admin", and log in without entering password.

3.2 Device Info

WAN: Uplink port; LAN: Downlink port

🟢: Greens means link is normal; ⚠️: Yellow means abnormality, general; 🔴: Red means abnormality, serious. See Figure 3-2 for more details.

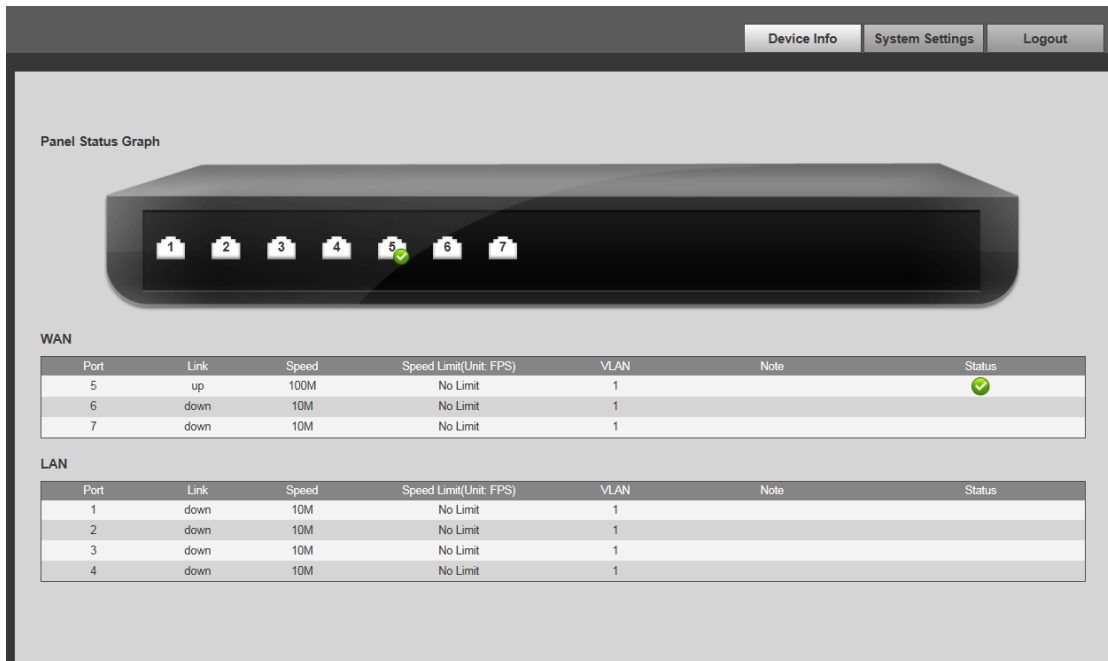

The screenshot shows the 'Device Info' page with a 'Panel Status Graph' at the top displaying seven port indicators. Port 5 is green, while ports 6 and 7 are yellow. Below the graph are two tables: 'WAN' and 'LAN'.

Port	Link	Speed	Speed Limit(Unit: FPS)	VLAN	Note	Status
5	up	100M	No Limit	1		🟢
6	down	10M	No Limit	1		🟡
7	down	10M	No Limit	1		🟡

Port	Link	Speed	Speed Limit(Unit: FPS)	VLAN	Note	Status
1	down	10M	No Limit	1		🟡
2	down	10M	No Limit	1		🟡
3	down	10M	No Limit	1		🟡
4	down	10M	No Limit	1		🟡


Figure 3-2

3.3 System Settings

Users can check system information in “system settings”, and conduct the operations of network config, software upgrade, change password, restore default and system reboot.

3.3.1 System Info

Select “system settings > System info”, you can check model, SN and software version of the device, see Figure 3-3 for more details.

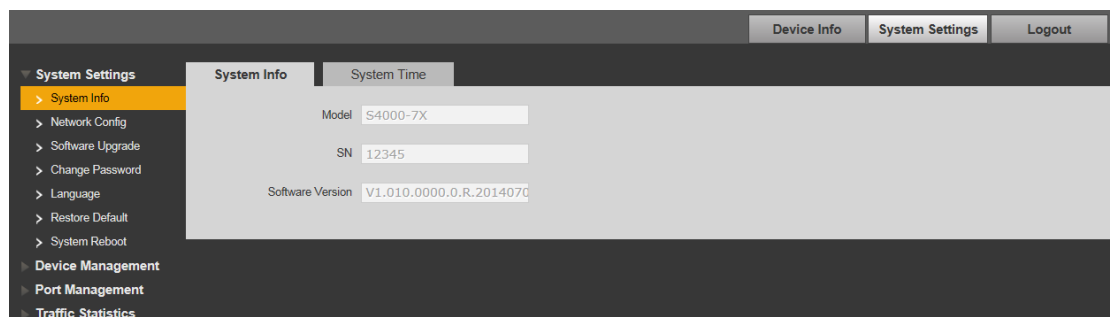

The screenshot shows the 'System Settings' page with a sidebar menu on the left. The 'System Info' tab is selected, displaying the following information:

- Model: S4000-7X
- SN: 12345
- Software Version: V1.010.0000.0.R.2014070

Figure 3-3

3.3.2 Network Config

DHCP Mode

After you select “DHCP” mode, you only need to configure DNS server, the device will auto acquire IP address.

Static Mode

You can configure device IP address, subnet mask and default gateway through network config.

Step 1 Select “System Settings > Network Config”, the system will display the interface which is shown in Figure 3-4 below.

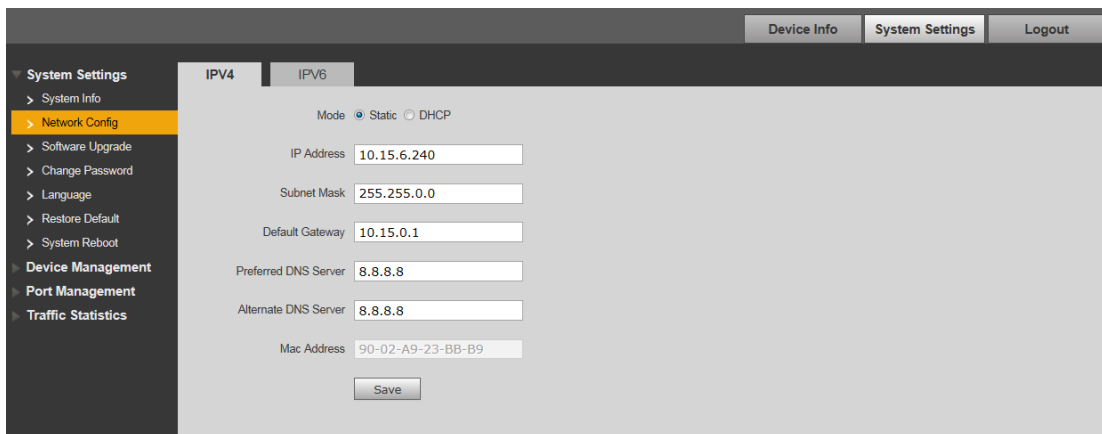


Figure 3-4

Step 2 Configure “IP address”, “Subnet mask”, “Default gateway” and “DNS server”.

Step 3 Click “Save” and complete configuration.

3.3.3 Software Upgrade

You can upgrade software to the latest version by software upgrade.

Step 1 Select “System Settings > Software Upgrade”, the system will display the interface which is shown in Figure 3-5 below.

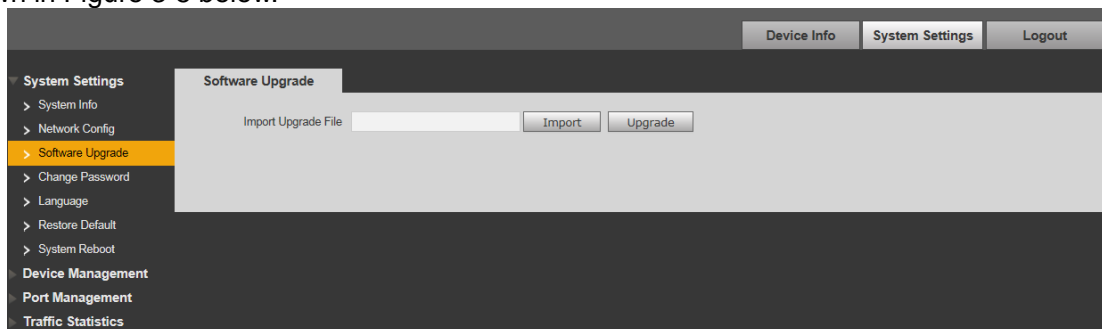


Figure 3-5

3.3.4 Change Password

There is no default password when the device is delivered out of factory. Therefore, you don't need to enter original password when changing password. See Figure 3-6 for more details.

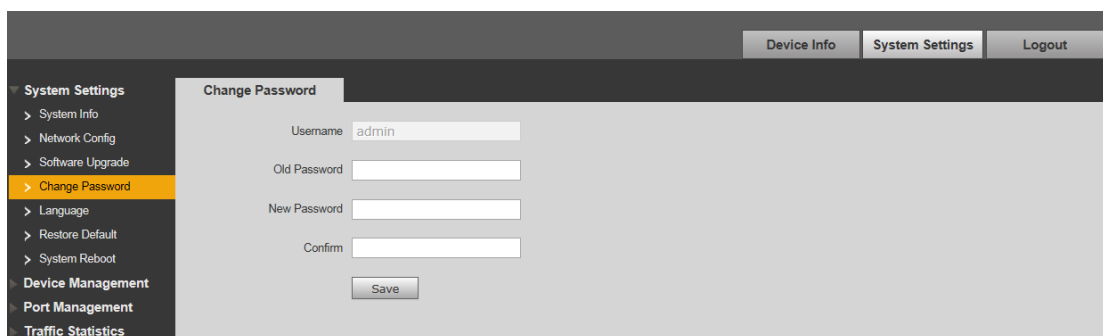


Figure 3-6

3.3.5 Restore Default

After you click “Restore Default Config”, the system will restore factory default configuration, please operate carefully.

Note:

After clicking “Restore Default Config”, IP address won’t restore default configuration. See Figure 3-7 for more details.

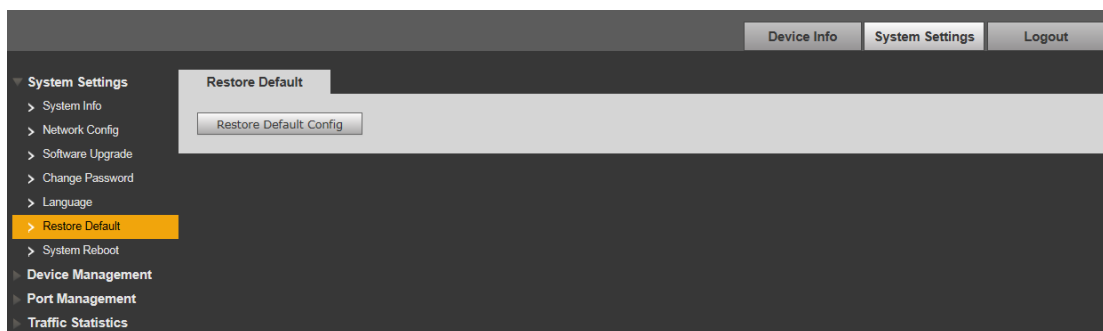


Figure 3-7

3.3.6 System Reboot

You can conduct remote reboot operation to the device by “System Reboot”. See Figure 3-8 for more details.



Figure 3-8

3.4 Device Management

You can make ring config, serial config, 802.1Q VLAN config and PORT VLAN config through device management.

3.4.1 Ring Config

Redundancy ring function can be realized by ring config.

Step 1 Connect cable according to the ring mode which is shown in Figure 3-9.

Step 2 Log in WEB interface, select “System settings > Device Management > Ring Config”, check “Enable”.

Step 3 Click “Save”.

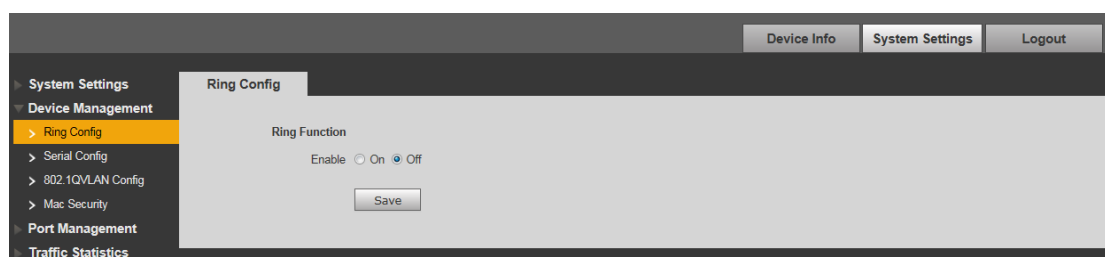


Figure 3-9

3.4.2 Serial Config

Serial port needs to be configured when it is connected to external device.

See Sheet 3-1 for more details about serial parameter.

Parameter	Description
Serial Index	Serial number, 1~4 respectively match RS485 ports of A1B1~A4B4.
Serial Enable	Control serial enable.
Serial Type	Only RS485 optional.
Serial Mode	Currently only support transparant serial.
Protocol Type	Select prtocol type, including TCP and UDP.
IP Address	Data transmission destination IP address.
IP Port	Data transmision destination IP port.
Baud Rate	Serial control information, keep consistent with external device.

Parameter	Description
Data Bit	
Stop Bit	
Parity Bit	

Sheet 3-1

See Figure 3-10 for more details about serial config.

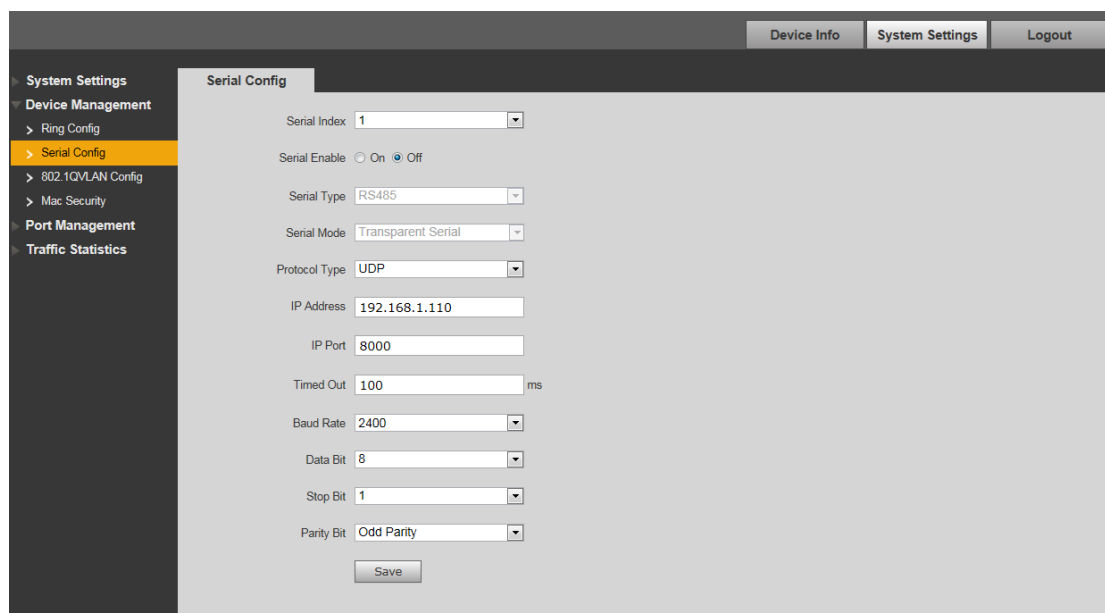


Figure 3-10

3.4.3 802.1Q VLAN Config

IEEE802.1Q is a protocol with VLAN identifying information for data frame which is authenticated by IEEE, which is also called “Tagging VLAN”. It can recognize max 4096 VLAN, the current configurable range is 1~4094.

Default VLAN ID number

When the port receives a package without VLAN Tag, the system will add default VLAN ID of the port, and forward the package to a port with default VLAN ID.

VLAN ID number which is allowed to pass

It means the VLAN which is allowed to pass by this port, and the range is 1~4094. When the port sends package, and if the VLAN ID of this package is the same as the default VLAN ID, then the system will remove the VLAN Tag of the package, and send this package.

Step 1 Select “Device Management > 802.1Q VLAN Config”, which is shown in Figure 3-11.

Step 2 Check “Enable 802.1QVLAN Config”, which means enabled.

Step 3 Set “default VLAN ID”, under the situation of default, the default VLAN ID of port is 1.

Step 4 Set Allow VLAN ID.

Step 5 Click “Save”, and complete the config.

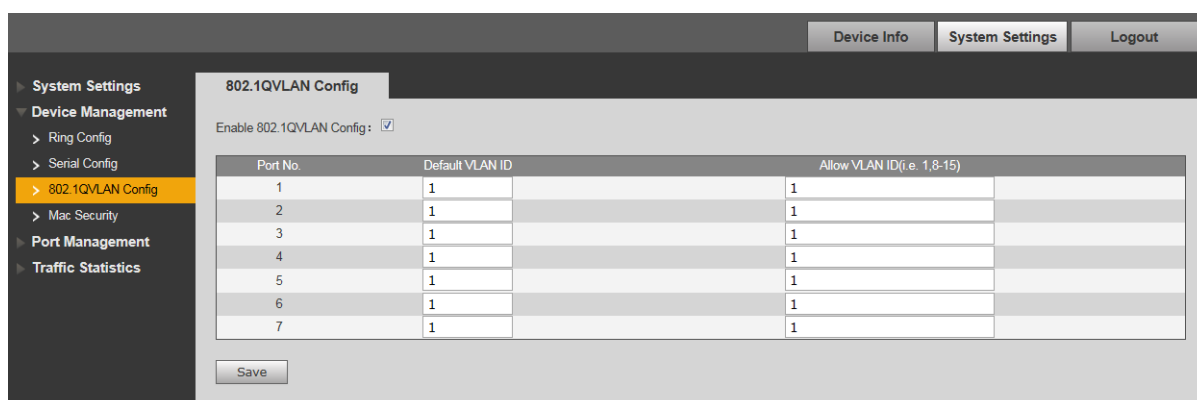


Figure 3-11

3.4.4 MAC Security

MAC address flooding is a kind of attack which is produced by illegal users using tools, this kind of attack will result in flow sending to all the ports with VLAN of all the switches by a way of flood, which will cause overload, slow network, and packet loss even breakdown for the switch.

Limit the max MAC quantity studied by single port (set 0 means no limit, max is 255), which effectively solve the problem of MAC address flooding. See Figure 3-12 for more details.

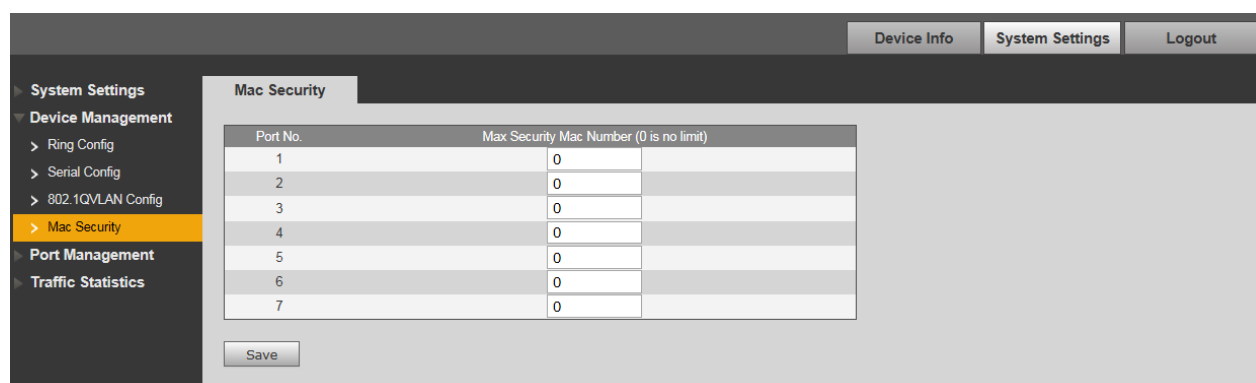


Figure 3-12

3.5 Port management

You can conduct port config, port mirroring config, port statistics and port speed limit through port management.

3.5.1 Port Config

You can set priority for each port by port config. The port with high-level priority can be processed first when flow congestion is generated among several ports.

“Enable Flow Control” means sending flow control message to data source port and adjusting network transmission rate when network congestion is on the way. See Figure 3-13 for more details.

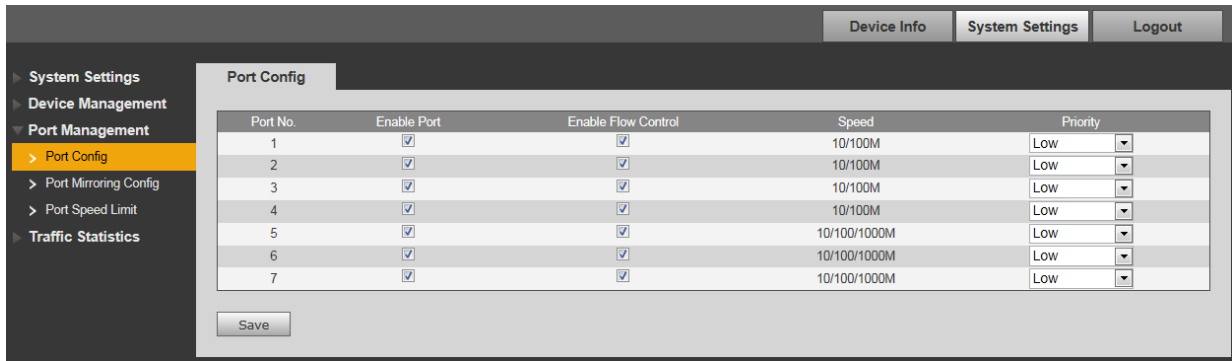


Figure 3-13

3.5.2 Port Mirroring Config

You can mirror the data of one port to another port by port mirroring, which can help the repair staff to locate problems. See Figure 3-14 for more details.



Figure 3-14

3.5.3 Port Speed Limit

You can limit the speed for each port by port speed limit. See Figure 3-15 for more details.

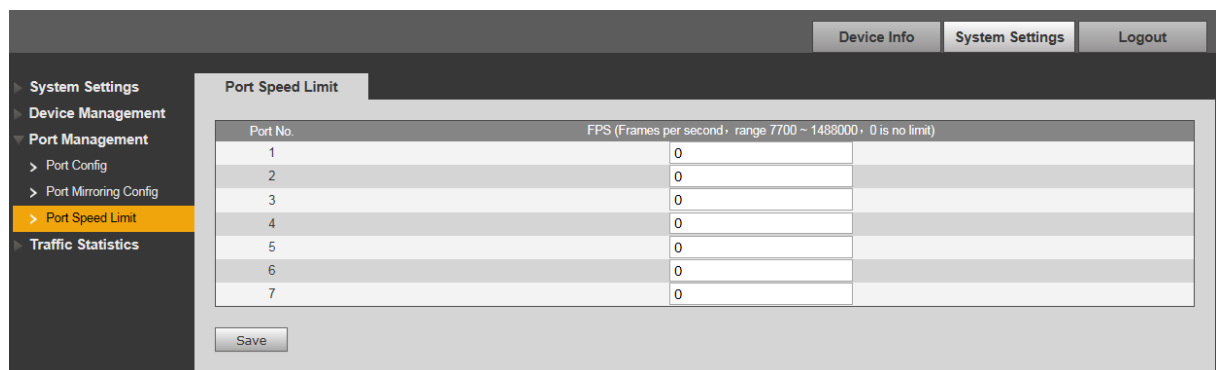


Figure 3-15

4 FAQ

Problem or Phenomenon	Possible Reasons	Solutions
Device power malfunction	External power supply unstable or power cable aging cause power damage.	Replace power
Link/Act (Fiber port indicator) not working	Optical module, fiber select unreasonable; fiber connection problem.	Select module reasonably, check if fiber connection is correct, or fiber insert reversely.
Network operation normal, individual device unable to work normally.	Port network cable loose or the port is polluted.	Check port network cable connection, keep the operation place clean.
No network	The system software version And the device are not matched.	Upgrade system software.
Switch indicator flicker frequency is very high, it can work normally for a short time when power on again after power off, but it soon restore to its original status.	<ul style="list-style-type: none"> ● Network loop Generally because both ends Of one physical network cable Are connected to the same Network device. ● Network virus attack Due to virus attack, it brings network bandwidth loss and network congestion. 	<ul style="list-style-type: none"> ● Check if it is loop, if yes, please cut off corresponding link or enable ring network function ● Check it receives network virus attack, please install firewall.

Appendix 1 Toxic or Hazardous Materials or Elements

Component Name	Toxic or Hazardous Materials or Elements					
	Pb	Hg	Cd	Cr VI	PBB	PBDE
Circuit Board Component	○	○	○	○	○	○
Device Case	○	○	○	○	○	○
Wire and Cable	○	○	○	○	○	○
Packing Components	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes

Note

- **This user's manual is for reference only.**
- **Slight difference may be found in user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks are the properties of their respective owners.**
- **If there is any uncertainty or controversy, please refer to the final explanation of us.**
- **Please visit our website for more information.**